


# ALPHABLOC® SPACE SAVER BEST PRACTICE GUIDE



## REMOVING FROM PALLET & STACKING FOR STORAGE

### REMOVING FROM PALLET

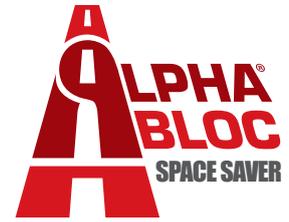

AlphaBloc® Space Saver barriers are supplied on pallets. They are shrink wrapped in plastic and secured with plastic banding straps.



The plastic wrap is easily removed by carefully running a knife through the shrink wrap material.



Pull the plastic wrap while moving around the pallet to remove.



The plastic banding straps can be cut carefully with a knife.



To remove a barrier from the top of the pallet, move to one side and reach for the first barrier.



Carefully hold the barrier with one hand either side and ease the barrier down until below chest height.



Hold on to the carry handle found at the top of the AlphaBloc®. This can be done with one hand due to the lightweight design.




Bend your knees and carefully lower the barrier to the ground.

### STACKING



To put the barriers away they should be in the closed position before laying them flat onto the pallet. The space saving design allows two barriers to be placed next to each other per pallet width. The two barriers should be positioned with the barrier legs opposite each other.

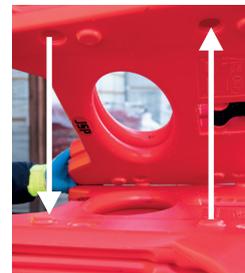


When placing the barriers on top of each other, the design allows a barrier to interlock into another to ensure a safe and secure stacking system.



JSP Ltd, Worsham Mill, Minster Lovell, Oxford, OX29 0TA, England  
Tel: +44 (0)1993 826050 Fax: +44 (0)1993 824411  
sales@jgpsafety.com export@jgpsafety.com www.jgpsafety.com  
Issued: 01/19 Copyright © 2019. JSP Ltd. All Rights Reserved



# ALPHABLOC® SPACE SAVER BEST PRACTICE GUIDE

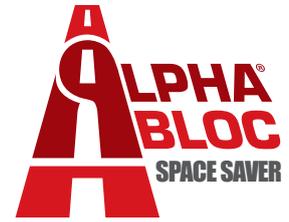

## CARRYING, OPENING & CLOSING, LINKING, FILLING & EMPTYING

### CARRYING



The convenient carry handle and lightweight design allows two barriers to be carried at the same time.


### OPENING & CLOSING



The uniquely foldable design allows for quick and easy deployment of the barrier.



Stand over the barrier, take hold of the bracing lock and push down to separate the feet. Ensure bracing lock is pushed fully down into the lock position. After use, pull up on the bracing lock until the barrier has returned to the closed position.

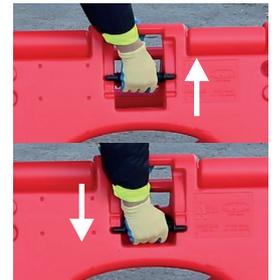

### LINKING



To link multiple barriers together, place the end of the barrier that has an aperture over the up-stand on the end of the next barrier.



The acute angled barrier design allows for multiple configurations on both flat and uneven surfaces.



### FILLING & EMPTYING



For increased stability, place a hose into the aperture and fill with water. There is one aperture for filling on each side of the barrier.



To empty, lift the end of the barrier furthest from the filling aperture and rest on the ground until the water ceases to flow.



JSP Ltd, Worsham Mill, Minster Lovell, Oxford, OX29 0TA, England  
Tel: +44 (0)1993 826050 Fax: +44 (0)1993 824411  
sales@jgpsafety.com export@jgpsafety.com www.jgpsafety.com  
Issued: 01/19 Copyright © 2019. JSP Ltd. All Rights Reserved

